



# Installation Manual for Inflatable pump

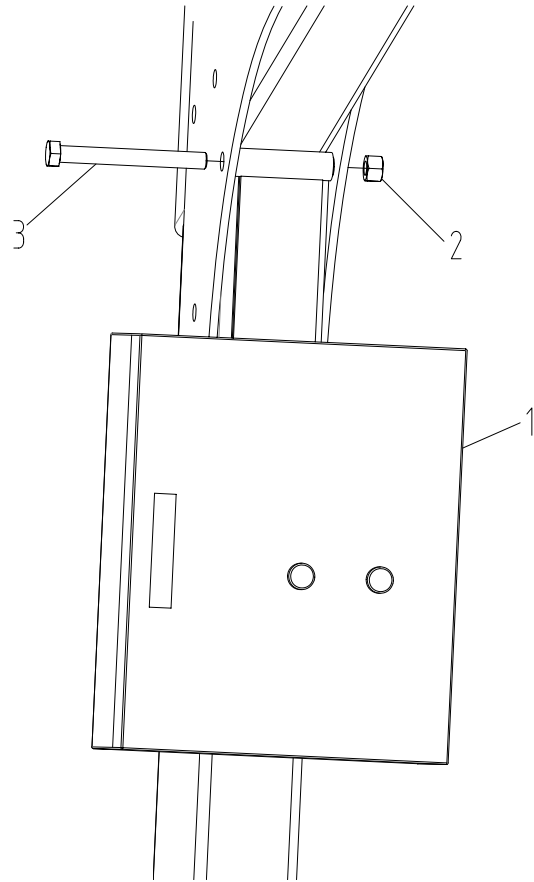

1—Inflatable pump 2—M20 bolts 3—M20\*17Screw nut  
Installation for connection hose

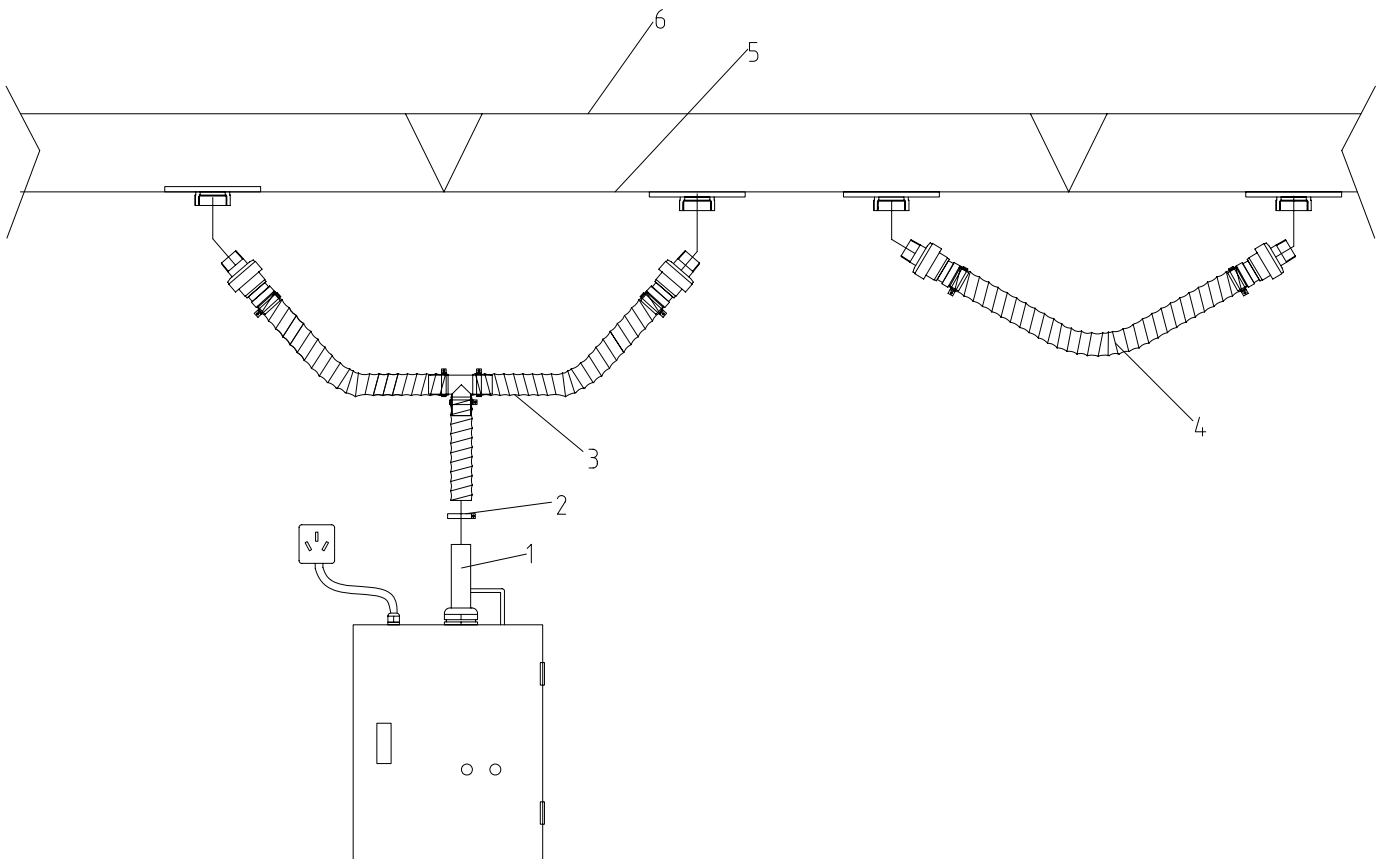

- 1—White PVC    2—Throat hoop    3—Tee connection hose    4—Two-pass connection hose  
 5—Inside of the PVC fabric    6—Outside of PVC Fabric

三、 Specification of Inflatable pump

1. Size: (400\*500\*200)mm    Weight: 22Kg

2. Specification

Power of Fan: 253W


Air Flow: 640 m<sup>3</sup>/h

Air Pressure: 80 Pa

Applicable area: 300 m<sup>2</sup>

4. Boot Instruction

Connect the power , open the electric control box door, and close the switch 1 .The power indicator light 4 ,  
 At the same time, the time relay indicator 2 is on. The indicator lamp 3 is blinking, indicating that the delay  
 is in progress. When the indicator lamp 3 is on Always on, at the same time, the operation indicator 5 on the  
 panel lights, and the fan starts to act - air supply

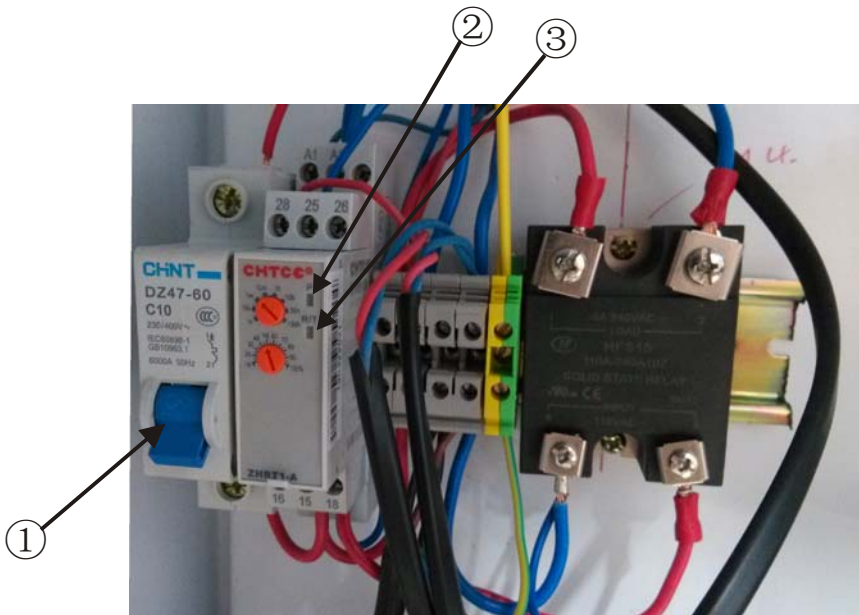

1. First time, open 3-6hours. The power supply must be in a constant state

Because when the air pressure inside the canopy is lower than the set air pressure value (for example, the air leakage in the canopy or the outside temperature is low), the wind machine will automatically open up the air. Each replenishment time is 2-3 minutes. When the pressure inside the tent is higher than the set pressure value, the safety valve will automatically exhaust (for example: the outside temperature is too high).

The place of the inflatable pump red part (it should be set in opposite angles)  
The connection hose is connected with each roof cover and gable cover

